Template version: proc-RFC\_template-1\_01\_011016.dot



## RFC 21 - Measurement API

Confidential, Draft rfc-0021-Measurement

24 Pages

## **Abstract**

Data sources, such as electrical measuring instruments, speedometers and water tanks (pressure, level, etc) will generate state and measurement information. This RFC presents a simple and general API that provides a standardized encapsulation of measurements and states.

Copyright © IBM Corporation 2001.

Copyright © The Open Services Gateway Initiative 2001

This contribution is made to the Open Services Gateway Initiative (OSGI) as MEMBER LICENSED MATERIALS pursuant to the terms of the OSGI membership agreement and specifically the license rights and warranty disclaimers as set forth in Sections 3.2 and 12.1, respectively.

All company, brand and product names contained within this document may be trademarks that are the sole property of the respective owners.

The above notice must be included on all copies of this document that are made.

# **0 Document Information**

## 0.1 Table of Contents

0 Document Information	2
0.1 Table of Contents	2
0.2 Status	3
0.3 Acknowledgement	4
0.4 Terminology and Document Conventions	4
0.5 Revision History	
1 Introduction	5
2 Motivation and Rationale	5
3 Technical Discussion	5
3.1 Package org.osgi.util.measurement Description	5
3.2 org.osgi.util.measurement Class Measurement	Co
3.2.2 Measurement	
3.2.3 Measurement	
3.2.4 Measurement	
3.2.5 getValue	
3.2.6 getError	
3.2.7 getUnit	
3.2.8 getTime	9
3.2.9 mul	9
3.2.10 mul	
3.2.11 mul	
3.2.12 div	
3.2.13 div	
3.2.14 div	
3.2.15 add	
3.2.16 add 3.2.17 add	
3.2.18 sub	
3.2.19 sub	
3.2.20 sub	
3.2.21 toString	
3.2.22 compareTo	
3.2.23 hashCode	
3.2.24 equals	
3.3 org.osgi.util.measurement Class State	
3.3.1 State	14
3.3.2 State	
3.3.3 getValue	
2.2.0 90.7 0.00	



## Version 1.00A, October 24, 2001

3.3.4 getTime	15
3.3.5 getName	16
3.3.6 toString	16
3.3.7 hashCode	16
3.3.8 equals	16
3.4 org.osgi.util.measurement Class Unit	16
3.4.1 unity	
3.4.2 m	
3.4.3 s	
3.4.4 kg	
3.4.5 K	
3.4.6 A	
3.4.7 mol	19
3.4.8 cd	19
3.4.9 m_s	20
3.4.10 m_s2	20
3.4.11 m2	20
3.4.12 m3	20
3.4.13 Hz	20
3.4.14 N	20
3.4.15 Pa	
3.4.16 J	
3.4.17 W	
3.4.18 C	
3.4.19 V	
3.4.20 F	
3.4.21 Ohm	
3.4.22 S	
3.4.23 Wb	
3.4.24 T	
3.4.25 lx	
3.4.26 Gy 3.4.27 kat	
3.4.28 rad	
3.4.29 Bg	
3.4.30 equals	
3.4.31 hashCode	
3.4.32 toString	
5.1.02 t55111g	20
4 Security Considerations	23
5 Document Support	24
5.1 References	24
5.2 Author's Address	
5.3 Acronyms and Abbreviations	
5.4 End of Document	

## 0.2 Status

This document specifies a Measurement API for the Open Services Gateway Initiative, and requests discussion and suggestions for improvements. Distribution of this document is unlimited within OSGi.



## 0.3 Acknowledgement

This work began in VEG which did performed the lion share of the work while CPEG was busy completing SPR2.

## 0.4 Terminology and Document Conventions

The key words "MUST", "MUST NOT", "REQUIRED", "SHALL", "SHALL NOT", "SHOULD", "SHOULD NOT", "RECOMMENDED", "NOT RECOMMENDED", "MAY" and "OPTIONAL" in this document are to be interpreted as described in [1].

Source code is shown in this typeface.

## 0.5 Revision History

The last named individual in this history is currently responsible for this document.

Revision	Date	Comments
Initial	2001-06-15	First draft Erwin Morrhey, Jon-Erling Dahl
		Etwin Worney, 30n-Ening Dani
First CPEG draft	2001-10-16	Substantially modified RFC. Only org.osgi.util.measurement package remains. Cleaned up implementation and javadoc comments. The following areas were modified/clarified:
		Exponent overflow/underflow
		Time of new measurement
		Comparable for Measurement
		Add String name to State
		BJ Hargrave, IBM, hargrave@us.ibm.com
Second CPEG Draft	2001-10-24	Corrected implementation bugs. Replaced deg with rad. Exponents are 7 bits not 8 bits now. Removed copy constructors.
		Peter Kriens, OSGi , pkriens@aQute.se
		BJ Hargrave, IBM, hargrave@us.ibm.com



# 1 Introduction

These classes provide a standardized way to encapsulate measurements.

## 2 Motivation and Rationale

Data sources, such as electrical measuring instruments, speedometers and water tanks (pressure, level, etc) will generate state and measurement information. This RFC presents a simple and general API that provides a standardized encapsulation of measurements and states.

# 3 Technical Discussion

Package Class Tree Deprecated Index Help

PREV PACKAGE NEXT PACKAGE FRAMES NO FRAMES

## 3.1 Package org.osgi.util.measurement Description

The OSGi Measurement Package. Specification Version 1.0.

Bundles wishing to use this package must list the package in the Import-Package header of the bundle's manifest. For example:

Import-Package: org.osgi.util.measurement; specification-version=1.0

# 3.2 org.osgi.util.measurement Class Measurement

java.lang.Object

II Page Within This B



+-org.osgi.util.measurement.Measurement

## All Implemented Interfaces:

java.lang.Comparable

public class **Measurement** extends java.lang.Object implements java.lang.Comparable

Groups a value, error, unit and timestamp.

A Measurement is used for maintaining the tuple of value, error, unit and timestamp. The value and error are represented as doubles and the time is measured in milliseconds since midnight, January 1, 1970 UTC.

Mathemenatic methods are provided that correctly calculate taking the error into account. A runtime error will occur when two measurements are used in an incompatible way. *e.g.* when a speed (m/s) is added to a distance (m). The measurement class will correctly track changes in unit during multiplication and division, always coercing the result to the most simple form. See <u>Unit</u> for more information on the supported units.

Errors in the measurement class are absolute errors. Measurement errors should use the P95 rule. Actual values must fall in the range value error 95% or more of the time.

A Measurement object is immutable in order to be easily shared.

Note: This class has a natural ordering that is inconsistent with equals. See compareTo(java.lang.Object).

Version:

\$Revision: 1.6 \$

**Author:** 

Open Services Gateway Initiative

Constructor Summary			
Measurement (double value)  Create a new Measurement object	t with an error of 0.0, a uni	it of <u>Unit.unity</u> and a t	ime of 0.
Measurement (double value, Create a new Measurement object	double et with a time of 0.	error,	<u>Unit</u> unit)
Measurement (double value, Create a new Measurement object	double error,	<u>Unit</u> unit,	long time)
Measurement (double value,  Create a new Measurement object with an error of 0.0 and a time of 0.			

Method Summary		
Measurement	add (double d)  Returns a new Measurement object that is the sum of this object added to the	
	specified value.	

age Within This I



Version 1.00A, October 24, 2001

Measurement	add (double d, Unit u)  Returns a new Measurement object that is the sum of this object added to the specified value.
Measurement	add (Measurement m)  Returns a new Measurement object that is the sum of this object added to the specified object.
int	CompareTo (java.lang.Object obj) Compares this object with the specified object for order.
Measurement	Returns a new Measurement object that is the quotient of this object divided by the specified value.
Measurement	div (double d, Unit u)  Returns a new Measurement object that is the quotient of this object divided by the specified value.
Measurement	Returns a new Measurement object that is the quotient of this object divided by the specified object.
boolean	equals (java.lang.Object obj)  Return whether the specified object is equal to this object.
double	Returns the error of this Measurement.
long	Returns the time at which this Measurement was taken.
<u>Unit</u>	getUnit()         Returns the Unit of this Measurement.
double	getValue()  Returns the value of this Measurement.
int	Returns a hash code value for this object.
Measurement	Returns a new Measurement object that is the product of this object multiplied by the specified value.
Measurement	mul (double d, Unit u)  Returns a new Measurement object that is the product of this object multiplied by the specified value.
Measurement	mul (Measurement m)  Returns a new Measurement object that is the product of this object multiplied by the specified object.
Measurement	sub (double d)  Returns a new Measurement object that is the subtraction of the specified value from this object.
Measurement	sub (double d, Unit u)  Returns a new Measurement object that is the subtraction of the specified value from this object.



Version 1.00A, October 24, 2001

	<pre>sub (Measurement m) Returns a new Measurement object that is the subtraction of the specified object from this object.</pre>
java.lang.String	toString()  Returns a String representation of this Measurement

## Methods inherited from class java.lang.Object

clone, finalize, getClass, notify, notifyAll, wait, wait, wait

## **Constructor Detail**

## 3.2.1 Measurement

Create a new Measurement object.

#### Parameters:

value - The value of the Measurement.

error - The error of the Measurement.

unit - The Unit in which the Measurement. If this argument is null, then the unit will be set to Unit.unity.

time - The time measured in milliseconds since midnight, January 1, 1970 UTC.

## 3.2.2 Measurement

Create a new Measurement object with a time of 0.

## Parameters:

value - The value of the Measurement.

error - The error of the Measurement.

unit - The Unit in which the Measurement. If this argument is null, then the unit will be set to <a href="Unit.unity">Unit.unity</a>.

## 3.2.3 Measurement

Create a new Measurement object with an error of 0.0 and a time of 0.

#### Parameters:

value - The value of the Measurement.

unit - The Unit in which the Measurement. If this argument is null, then the unit will be set to Unit.unity.

e within this bo



ilidential, Drait

## 3.2.4 Measurement

public Measurement(double value)

Create a new Measurement object with an error of 0.0, a unit of Unit.unity and a time of 0.

#### Parameters:

value - The value of the Measurement.

#### **Method Detail**

## 3.2.5 getValue

public final double getValue()

Returns the value of this Measurement.

Returns:

The value of this Measurement as a double.

## 3.2.6 getError

public final double getError()

Returns the error of this Measurement. The error is always a positive value.

Returns:

The error of this Measurement as a double.

## 3.2.7 getUnit

public final Unit getUnit()

Returns the Unit of this Measurement.

Returns:

The Unit of this Measurement.

See Also:

Unit

## 3.2.8 getTime

public final long getTime()

Returns the time at which this Measurement was taken. The time is measured in milliseconds since midnight, January 1, 1970 UTC.

Returns:

the time at which this Measurement was taken.

## 3.2.9 mul

public Measurement mul(Measurement m)

Returns a new Measurement object that is the product of this object multiplied by the specified object.

#### Parameters:

m - The Measurement object that will be multiplied with this object.

Returns:



Version 1.00A, October 24, 2001

A new Measurement that is the product of this object multiplied by the specified object. The error and Unit of the new object are computed. The time of the new object is set to the time of this object.

#### Throws:

ArithmeticException - If the Units of this object and the specified object cannot be multiplied.

#### See Also:

Unit

## 3.2.10 mul

Returns a new Measurement object that is the product of this object multiplied by the specified value.

#### Parameters:

- d The value that will be multiplied with this object.
- u The Unit of the specified value.

#### Returns

A new Measurement that is the product of this object multiplied by the specified value. The error and Unit of the new object are computed. The time of the new object is set to the time of this object.

#### Throws:

ArithmeticException - If the Units of this object and the specified value cannot be multiplied.

#### See Also:

Unit

## 3.2.11 mul

public Measurement mul(double d)

Returns a new Measurement object that is the product of this object multiplied by the specified value.

#### Parameters:

d - The value that will be multiplied with this object.

### Returns:

A new Measurement that is the product of this object multiplied by the specified value. The error of the new object is computed. The Unit and time of the new object is set to the Unit and time of this object.

## 3.2.12 div

public Measurement div(Measurement m)

Returns a new Measurement object that is the quotient of this object divided by the specified object.

#### Parameters:

m - The Measurement object that will be the divisor of this object.

#### Returns:

A new Measurement that is the quotient of this object dividied by the specified object. The error and Unit of the new object are computed. The time of the new object is set to the time of this object.

#### **Throws**

ArithmeticException - If the Units of this object and the specified object cannot be divided.

## See Also:

Unit

## 3.2.13 div

public Measurement div (double d,





Oraft Version 1.00A, October 24, 2001

Unit u)

Returns a new Measurement object that is the quotient of this object divided by the specified value.

#### Parameters:

- d The value that will be the divisor of this object.
- u The Unit of the specified value.

#### Returns:

A new Measurement that is the quotient of this object dividied by the specified value. The error and Unit of the new object are computed. The time of the new object is set to the time of this object.

#### Throws:

ArithmeticException - If the Units of this object and the specified object cannot be divided.

#### See Also:

Unit

## 3.2.14 div

public Measurement div(double d)

Returns a new Measurement object that is the quotient of this object divided by the specified value.

#### Parameters:

d - The value that will be the divisor of this object.

#### Returns:

A new Measurement that is the quotient of this object dividied by the specified value. The error of the new object is computed. The Unit and time of the new object is set to the Unit and time of this object.

## 3.2.15 add

public Measurement add(Measurement m)

Returns a new Measurement object that is the sum of this object added to the specified object.

#### Parameters:

m - The Measurement object that will be added with this object.

#### Returns:

A new Measurement that is the sum of this object added to the specified object. The error and Unit of the new object are computed. The time of the new object is set to the time of this object.

#### Throws:

ArithmeticException - If the Units of this object and the specified object cannot be added.

#### See Also:

Unit

## 3.2.16 add

public Measurement add (double d,

Unit u)

Returns a new Measurement object that is the sum of this object added to the specified value.

#### Parameters:

- d The value that will be added with this object.
- u The Unit of the specified value.

#### Returns:

A new Measurement that is the sum of this object added to the specified value. The Unit of the new object is computed. The error and time of the new object is set to the error and time of this object.

## Throws:

ArithmeticException - If the Units of this object and the specified value cannot be added.



See Also:

Unit

## 3.2.17 add

public Measurement add(double d)

Returns a new Measurement object that is the sum of this object added to the specified value.

#### Parameters:

d - The value that will be added with this object.

#### Returns:

A new Measurement that is the sum of this object added to the specified value. The error, Unit and time of the new object is set to the error, Unit and time of this object.

## 3.2.18 sub

public Measurement sub (Measurement m)

Returns a new Measurement object that is the subtraction of the specified object from this object.

#### Parameters:

m - The Measurement object that will be subtracted from this object.

#### Returns:

A new Measurement that is the subtraction of the specified object from this object. The error and Unit of the new object are computed. The time of the new object is set to the time of this object.

#### Throws:

ArithmeticException - If the Units of this object and the specified object cannot be subtracted.

#### See Also:

Unit

## 3.2.19 sub

public Measurement sub (double d,

Unit u)

Returns a new Measurement object that is the subtraction of the specified value from this object.

#### Parameters:

- d The value that will be subtracted from this object.
- u The Unit of the specified value.

#### Returns:

A new Measurement that is the subtraction of the specified value from this object. The Unit of the new object is computed. The error and time of the new object is set to the error and time of this object.

## Throws:

ArithmeticException - If the Units of this object and the specified object cannot be subtracted.

#### See Also:

Unit

## 3.2.20 sub

public Measurement sub(double d)

Returns a new Measurement object that is the subtraction of the specified value from this object.

## Parameters:

d - The value that will be subtracted from this object.

#### Returns:



Version 1.00A, October 24, 2001

A new Measurement that is the subtraction of the specified value from this object. The error, Unit and time of the new object is set to the error, Unit and time of this object.

## 3.2.21 toString

public java.lang.String toString()

Returns a String representation of this Measurement

#### Overrides:

toString in class java.lang.Object

## Returns:

a String representation of this Measurement

## 3.2.22 compareTo

```
public int compareTo(java.lang.Object obj)
```

Compares this object with the specified object for order. Returns a negative integer, zero, or a positive integer if this object is less than, equal to, or greater than the specified object.

Note: This class has a natural ordering that is inconsistent with equals. For this method, another Measurement object is considered equal if there is some x such that

```
getValue()-getError() <= x <= getValue() \square \square \square()
```

for both Measurement objects being compared.

#### Specified by:

compareTo in interface java.lang.Comparable

## Parameters:

obj - The object to be compared.

## Returns:

A negative integer, zero, or a positive integer if this object is less than, equal to, or greater than the specified object.

### Throws:

ClassCastException - If the specified object is not of type Measurement.

ArithmeticException - If the Unit of the specified Measurement object is not equal to the Unit of this object.

## 3.2.23 hashCode

public int hashCode()

Returns a hash code value for this object.

## Overrides:

hashCode in class java.lang.Object

## Returns:

A hash code value for this object.

## 3.2.24 equals

public boolean equals(java.lang.Object obj)

rage within this bo



Version 1.00A, October 24, 2001

Return whether the specified object is equal to this object. Two Measurement objects are equal if they have same value, error and Unit.

Note: This class has a natural ordering that is inconsistent with equals. See compareTo(java.lang.Object).

#### Overrides:

equals in class java.lang.Object

#### Parameters:

obj - The object to compare with this object.

#### Returns:

true if this object is equal to the specified object; false otherwise.

# 3.3 org.osgi.util.measurement Class State

## public class State

extends java.lang.Object

Groups a state name, value and timestamp.

The state itself is represented as an integer and the time is measured in milliseconds since midnight, January 1, 1970 UTC.

A State object is immutable so that it may be easily shared.

## Version:

\$Revision: 1.5 \$

## **Author:**

Open Services Gateway Initiative

# Constructor Summary State (int value, java.lang.String name) Create a new State object with a time of 0. State (int value, java.lang.String name, long time) Create a new State object.

Method Summary		
boolean	equals (java.lang.Object obj)  Return whether the specified object is equal to this object.	
java.lang.String	getName ()  Returns the name of this State.	
long	Returns the time with which this State was created.	

Itnin Inis Box



Version 1.00A, October 24, 2001

int	getValue()  Returns the value of this State.
int	hashCode () Returns a hash code value for this object.
java.lang.String	toString() Returns a String representation of this object.

## Methods inherited from class java.lang.Object

clone, finalize, getClass, notify, notifyAll, wait, wait, wait

## **Constructor Detail**

## 3.3.1 State

Create a new State object.

#### Parameters:

value - The value of the state.

name - The name of the state.

time - The time measured in milliseconds since midnight, January 1, 1970 UTC.

## 3.3.2 State

Create a new State object with a time of 0.

## Parameters:

value - The value of the state. name - The name of the state.

## **Method Detail**

## 3.3.3 getValue

```
public final int getValue()
```

Returns the value of this State.

#### Returns:

The value of this State object.

## 3.3.4 getTime

```
public final long getTime()
```

Returns the time with which this State was created.

Returns:

rage within this bo



Version 1.00A, October 24, 2001

The time with which this State was created. The time is measured in milliseconds since midnight, January 1, 1970 UTC.

## 3.3.5 getName

public final java.lang.String getName()

Returns the name of this State.

Returns:

The name of this State object.

## 3.3.6 toString

public java.lang.String toString()

Returns a String representation of this object.

Overrides:

toString in class java.lang.Object

Returns:

a String representation of this object.

## 3.3.7 hashCode

public int hashCode()

Returns a hash code value for this object.

Overrides:

hashCode in class java.lang.Object

Returns:

A hash code value for this object.

## **3.3.8 equals**

public boolean equals(java.lang.Object obj)

Return whether the specified object is equal to this object. Two State objects are equal if they have same value and name.

Overrides:

equals in class java.lang.Object

Parameters:

obj - The object to compare with this object.

Returns:

true if this object is equal to the specified object; false otherwise.

# 3.4 org.osgi.util.measurement Class Unit

public class Unit

rage within this b



Confidential, Draft

extends java.lang.Object

A unit system for measurements. This class contains definitions of the most common SI units.

Units in this class are unique.

For a description of the units and SI system see: <a href="http://physics.nist.gov/cuu/Units/units.html">http://physics.nist.gov/cuu/Units/units.html</a>

This class only support exponents for the base SI units in the range -64 to +63. Any operation which produces an exponent outside of this range will result in a Unit with undefined exponents.

## Version:

\$Revision: 1.7 \$

## Author:

Open Services Gateway Initiative

Field Summary		
static <u>Unit</u>	<u>A</u>	The electric current unit ampere (A)
static <u>Unit</u>	Bq	The activity (of a radionuclide) unit becquerel (Bq).
static <u>Unit</u>	<u>C</u>	The electric charge unit coulomb (C).
static <u>Unit</u>	cd	The luminous intensity unit candela (cd)
static <u>Unit</u>	F	The capacitance unit farad (F).
static <u>Unit</u>	Gу	The absorbed dose unit gray (Gy).
static <u>Unit</u>	Hz	The frequency unit hertz (Hz).
static <u>Unit</u>	J	The energy unit joule (J).
static <u>Unit</u>	<u>K</u>	The temperature unit kelvin (K)
static <u>Unit</u>	kat	The catalytic activity unit katal (kat).
static <u>Unit</u>	kg	The mass unit kilogram (kg)
static <u>Unit</u>	<u>1x</u>	The illuminance unit lux (lx).
static <u>Unit</u>	<u>m</u>	The length unit meter (m)
static <u>Unit</u>	m_s	The speed unit meter per second (m/s)

Copyright © IBM Corporation 2001
Copyright © The Open Services Gateway Initiative 2001



Version 1.00A, October 24, 2001

•			
static	Unit	m s2	The acceleration unit meter per second squared (m/s²)
static	Unit	<u>m2</u>	The area unit square meter (m <sup>2</sup> )
static	Unit	<u>m3</u>	The volume unit cubic meter (m³)
static	<u>Unit</u>	<u>mol</u>	The amount of substance unit mole (mol)
static	<u>Unit</u>	<u>N</u>	The force unit newton (N).
static	Unit	<u>Ohm</u>	The electric resistance unit ohm.
static	Unit	<u>Pa</u>	The pressure unit pascal (Pa).
static	<u>Unit</u>	rad	The angle unit radians (rad)
static	<u>Unit</u>	<u>s</u>	The time unit second (s)
static	Unit	<u>s</u>	The electric conductance unit siemens (S).
static	<u>Unit</u>	T	The magnetic flux density unit tesla (T).
static	<u>Unit</u>	unit	<u>y</u> Unspecified Unit
static	Unit	<u>v</u>	The electric potential difference unit volt (V).
static	Unit	<u>w</u>	The power unit watt $(W)$ .
static	Unit	<u>Wb</u>	The magnetic flux unit weber (Wb).
2			

Method Summary		
boolean	equals (java.lang.Object obj)  Checks whether this Unit is equal to the specified Unit.	
int	hashCode () Returns the hash code for this object.	
java.lang.String	toString()   Returns a String representation of the Unit	

## Methods inherited from class java.lang.Object



Version 1.00A, October 24, 2001

clone, finalize, getClass, notify, notifyAll, wait, wait, wait

## **Field Detail**

## 3.4.1 unity

```
\begin{array}{c} \text{public static final } \underline{\text{Unit}} \ \ \textbf{unity} \\ \text{Unspecified Unit} \end{array}
```

## 3.4.2 m

```
public static final \underline{\text{Unit}} \mathbf{m}
The length unit meter (m)
```

## 3.4.3 s

```
public static final \underline{\text{Unit}} s

The time unit second (s)
```

## 3.4.4 kg

```
public static final Unit kg
The mass unit kilogram (kg)
```

## 3.4.5 K

```
public static final \underline{\text{Unit}} \mathbf{K}

The temperature unit kelvin (K)
```

## 3.4.6 A

```
public static final <u>Unit</u> A

The electric current unit ampere (A)
```


## 3.4.7 mol

```
public static final \underline{\text{Unit}} mol The amount of substance unit mole (mol)
```

## 3.4.8 cd

```
public static final Unit cd
The luminous intensity unit candela (cd)
```

Within This Bo

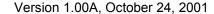



## 3.4.9 m s

```
public static final \underline{\text{Unit}} \underline{\text{m}}_{\underline{\text{s}}}

The speed unit meter per second (m/s)
```

## 3.4.10 m\_s2

```
public static final \underline{\text{Unit}} \mathbf{m}_{-}\mathbf{s2}

The acceleration unit meter per second squared (\mathbf{m}/\mathbf{s}^2)
```

## 3.4.11 m2

```
public static final \underline{\text{Unit}} m2

The area unit square meter (m<sup>2</sup>)
```

## 3.4.12 m3

```
public static final \underline{\text{Unit}} m3

The volume unit cubic meter (m<sup>3</sup>)
```

## 3.4.13 Hz

```
public static final Unit Hz
The frequency unit hertz (Hz).

hertz is expressed in SI units as 1/s
```

## 3.4.14 N

```
public static final \underline{Unit} N

The force unit newton (N).

N is expressed in SI units as \mathbf{m} \cdot \mathbf{kg/s^2}
```

## 3.4.15 Pa

```
public static final \underline{\text{Unit}} Pa

The pressure unit pascal (Pa).

Pa is equal to \mathbf{N}/\mathbf{m}^2 or is expressed in SI units as kg/\mathbf{m} \cdot \mathbf{s}^2
```

## 3.4.16 J

```
public static final <u>Unit</u> J

The energy unit joule (J).

joule is equal to N·m or is expressed in SI units as m²·kg/s²
```

ige within this bo

#### 3.4.17 W

```
public static final Unit W

The power unit watt (W).

watt is equal to J/s or is expressed in SI units as m^2 \cdot kg/s^3
```

## 3.4.18 C

```
public static final <u>Unit</u> C

The electric charge unit coulomb (C).

coulomb is expressed in SI units as s·A
```

## 3.4.19 V

```
public static final Unit V

The electric potential difference unit volt (V).

volt is equal to W/A or is expressed in SI units as m²·kg/s³·A
```

## 3.4.20 F

```
public static final <u>Unit</u> F

The capacitance unit farad (F).

farad is equal to c/v or is expressed in SI units as s<sup>4</sup>·A<sup>2</sup>/m<sup>2</sup>·kg
```

## 3.4.21 Ohm

```
public static final <u>Unit</u> Ohm

The electric resistance unit ohm.

ohm is equal to v/A or is expressed in SI units as m²·kg/s³·A²
```

## 3.4.22 S

```
public static final <u>Unit</u> S

The electric conductance unit siemens (S).

siemens is equal to A/V or is expressed in SI units as s³·A²/m²·kg
```

## 3.4.23 Wb

```
public static final <u>Unit</u> Wb

The magnetic flux unit weber (Wb).
```

II Page Within This B





weber is equal to  $v \cdot s$  or is expressed in SI units as  $m^2 \cdot kg/s^2 \cdot A$ 

## 3.4.24 T

```
public static final Unit T

The magnetic flux density unit tesla (T).

tesla is equal to Wb/m^2 or is expressed in SI units as kg/s^2 \cdot A
```

## 3.4.25 lx

```
public static final \frac{\text{Unit}}{\text{In}} lx The illuminance unit lux (lx). lux is expressed in SI units as \text{cd/m}^2
```

## 3.4.26 Gy

```
public static final <u>Unit</u> Gy

The absorbed dose unit gray (Gy).

Gy is equal to J/kg or is expressed in SI units as m²·s²
```

## 3.4.27 kat

```
public static final <u>Unit</u> kat

The catalytic activity unit katal (kat).

katal is expressed in SI units as mol/s
```

## 3.4.28 rad

```
\begin{array}{c} \text{public static final } \underline{\text{Unit}} \quad \textbf{rad} \\ \hline \text{The angle unit } \text{radians} \quad \text{(rad)} \end{array}
```

## 3.4.29 Bq

```
public static final <u>Unit</u> Bq

The activity (of a radionuclide) unit becquerel (Bq).

Bq is expressed in SI units as 1/s
```

## **Method Detail**

## 3.4.30 equals

```
public boolean equals(java.lang.Object obj)
```

age Within This B



Version 1.00A, October 24, 2001

Checks whether this Unit is equal to the specified Unit. The Units are considered equal if their types are equal.

#### Overrides:

equals in class java.lang.Object

#### Parameters:

o - the Unit that should be checked for equality

#### Returns:

true if the specified Unit is equal to this Unit

## 3.4.31 hashCode

public int hashCode()

Returns the hash code for this object.

## Overrides:

hashCode in class java.lang.Object

#### Returns:

This object's hash code.

## 3.4.32 toString

public java.lang.String toString()

Returns a String representation of the Unit

## Overrides:

toString in class java.lang.Object

## Returns:

a String representation of the Unit

# **4 Security Considerations**

These immutable classes have no security concerns.

I rage within this b





# **5 Document Support**

## 5.1 References

[1]. Bradner, S., Key words for use in RFCs to Indicate Requirement Levels, RFC2119, March 1997.

## 5.2 Author's Address

Name BJ Hargrave Company IBM Address 11400 Burnet Road, Austin, TX 78758 USA Voice +1 521 838 9938 e-mail hargrave@us.ibm.com

Name Erwin Morrhey Company Acunia Address Vanden Tymplestraat 35 Voice +32 16 31 00 20 e-mail erwin.morrhey@acunia.com

Name Jon-Erling Dahl Company Ericsson automotive e-services Address Krokslätts fabriker 30, 431 37 Mölndal, Sweden Voice +46 708 32 91 80 e-mail jon-erling.dahl@emw.ericsson.se

## 5.3 Acronyms and Abbreviations

## 5.4 End of Document